




## Wiring Hints for WMA-1

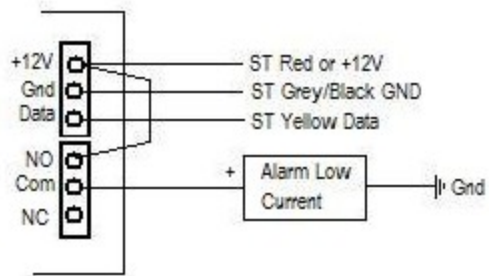

A. Low current Alarm powered from SeaTalk bus

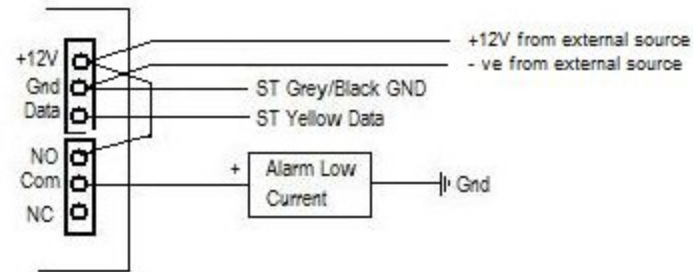

B. Low current alarm powered from external source

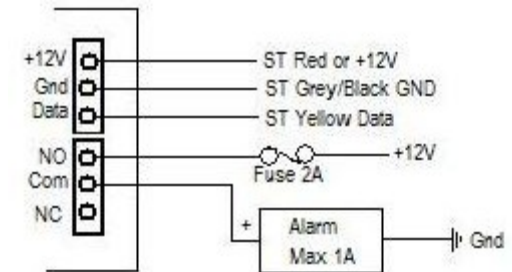

C. Alarm powered from Auxiliary battery